

Application



Offered in a type 6P enclosure with cable interface, the general purpose ultrasonic level transmitter provides continuous level measurement up to 32.8' (10m) with a 4-20 mA signal output, and is configured via our free Webcal software. This non-contact liquid level sensor is ideally suited for corrosive, ultrapure, sticky or dirty liquids, and is broadly selected for bulk storage, day tank, lift station and process tank level applications.



Features

- ✓ Offered in 4 measurement ranges from 9.8' (3m) to 32.8' (10m)
- ✓ DSP auto adaptive filters enable plug and play operation optimizing signal output filtering and obstacle recognition
- ✓ Submersible type 6P enclosure is ideal for sump and below grade installations
- ✓ Configuration is fast and easy via WebCal software and USB adapter
- ✓ Narrow 2" or 3" beam width for applications with limited measurement space
- ✓ Short 4" or 8" dead band maximizes the measureable filling capacity of the tank
- ✓ PVDF transducer and 6P polycarbonate enclosure for corrosive liquids
- ✓ Automatic temperature compensation for accurate measurement

Success



Ultrasonic level sensors are often used to measure open channel water flow that's discharged from rivers, streams, creeks, lakes or ponds. Here an

EchoSonic II level sensor is installed on the upstream side of a weir. The non-contact sensor measures the gravity-fed, liquid surface height as it passes through the V-notch, and provides a continuous 4-20 mA signal output. The PLC converts level height into flow volume with rate, totalization and data-logging functions for wastewater treatment and environmental reporting.

Compatible Products

DataLoop™ Level Indicator



DataView™ Level Controller



Commander™ Multi-Tank Level Controller




DataPoint™ Level Controller



Specifications

Range:	LU27: 4" to 8.2' (10cm to 2.5m) LU23: 8" to 18.0' (20cm to 5.5m) LU28: 8" to 24.6' (20cm to 7.5m) LU29: 8" to 32.8' (20cm to 10m)
Accuracy:	± 0.2% of range
Resolution:	LU27: 0.019" (0.5mm) LU23: 0.039" (1mm) LU28/29: 0.079" (2mm)
Dead band:	LU27: 4" (10cm) LU23/28/29: 8" (20cm)
Beam width:	LU27: 2" (5cm) LU23/28/29: 3" (7.6cm)
Configuration:	WebCal® PC Windows® USB 2.0
Memory:	Non-volatile
Supply voltage:	24 VDC (loop)
Consumption:	0.5W
Loop resistance:	500 ohms @ 24 VDC
Signal output:	4-20 mA, two-wire
Signal invert:	4-20 mA or 20-4 mA
Signal fail-safe:	4 mA, 20 mA, 21 mA, 22 mA or hold last
Process temp.:	F: -4° to 140° C: -20° to 60°
Temp. comp.:	Automatic
Ambient temp.:	F: -31° to 140° C: -35° to 60°
Pressure:	MWP = 30 PSI (2 bar)
Enclosure rating:	Type 6P, encapsulated, corrosion resistant & submersible
Encl. material:	Polycarbonate
Trans. material:	PVDF
Cable jacket mat:	Polyurethane
Cable type:	4-conductor, shielded
Cable length:	10' (3m)
Process mount:	LU27: 1" NPT (1" G) LU23/28/29: 2" NPT (2" G)
Mount gasket:	Viton®
Classification:	General purpose
Compliance:	CE, RoHS
Approvals:	cFMus

Dimensions

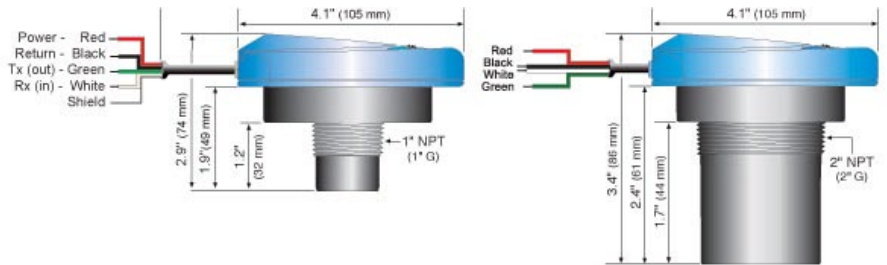

Configuration

The level sensor is configurable via our free WebCal PC software and Fob USB adapter. The sensors are offered with and without Fobs. Fobs are universal and can be used to configure any WebCal compatible product. Download your free copy of WebCal in English or Chinese at www.flowline.com/webcal.php.



LI99-1001

Fittings

For optimum performance, install the level sensor using the below recommended or direct equivalent fittings.

	P/N	Description
	LM52-1400	2" NPT x 1" NPT (Sch. 40)
	LM52-2400	3" NPT x 2" NPT (Sch. 40)
	LM52-2800	3" NPT x 2" NPT (Sch. 80)
	LM52-3800	4" NPT x 2" NPT (Sch. 80)
	LM52-1410	2" Socket x 1" NPT (Sch. 40)
	LM52-2410	3" Socket x 2" NPT (Sch. 40)
	LM52-3410	4" Socket x 2" NPT (Sch. 40)
	LM52-2810	3" Socket x 2" NPT (Sch. 80)
	LM52-3810	4" Socket x 2" NPT (Sch. 80)
	LM52-2890	2" NPT Bulkhead Fitting, PVC
	LM50-1001-1	1" NPT Bracket, Polypropylene
	LM50-1001	2" NPT Bracket, Polypropylene

Ordering

LU2 -

Sensor range

7	3m (9.8')
3	5.5m (18.0')
8	8m (26.2')
9	10m (32.8')

Process mount (1)

0	NPT (US)
1	G (Metric)

Fob USB adapter (2)

0	Without Fob
1	With Fob

Notes

- 1) Install the level sensor using Flowline installation fittings or equivalents.
- 2) The level sensor is configured via our WebCal software and one LI99-1001 Fob USB adapter. The level sensor is offered with and without a Fob. Fobs are universal and can be Used to configure any WebCal compatible product. WebCal is a free download from our website at www.flowline.com/webcal.php.